

BRIGHT CLEAN

Clean Channel selected

Tone switch pushed IN, P.D. Switch OUT

Humbuckers.



Single Coil Pick-ups.



CRUNCH

Overdrive 1 Channel selected

Humbuckers.



P.D. Switch OUT

Single Coil Pick-ups.



BLUES / ROCK

Overdrive 2 Channel selected

Humbuckers.



P.D. Switch OUT

Single Coil Pick-ups.



THRASH

Overdrive 2 Channel selected

Humbuckers.



P.D. Switch IN

Single Coil Pick-ups.



Suggested Settings

Please Note : The above Chorus settings are quite useable for most situations though as with the tone settings you may wish to use them purely as a starting point from where to develop your own sounds . Volume and Reverb should be adjusted to taste.